SDHC™ Memory Card

With Embedded Wireless LAN Functionality

FlashAir™ W-02

Supplementary Manual

Toshiba Electronics Europe GmbH

Table of Contents

Introduction 3
Precautions 3
Precautions for Wireless LAN 4
Important Message: Initial Settings 4
Setting Up the Product Using a Device Which Supports Wi-Fi 5
Setting Up the Product on A Personal Computer 8
Browse Data 9
How To Save Files 11
Functions On The File List Screen 12
Functions On The Image Display Screen 12
Setup Menu 13
  Network Settings 13
  Wireless LAN Startup Mode 14
  Photoshare 15
Operating Precautions 16
Wireless LAN Functional Specifications 16
FAQ 17
Footnotes 19
Safety Instructions for SD Cards 19
Safety information and Rules and Regulations for wireless LAN 20
Warranty statement 20
Regulatory Statements 21

Introduction

Thank you for purchasing a Toshiba FlashAir™ W-02 (hereafter Product). To ensure proper use, read this manual carefully and entirely before using the Product, then retain this manual for future reference.

Precautions

- The Product can be used with devices that are compatible with 8 GB/16 GB SDHC memory cards.
- Before using the Product, read the manual carefully and entirely for the device in which you intend to use the Product. Procedures may vary depending on whether your device supports FlashAir™. If your device supports FlashAir™, use the Product according to the procedure in your device's manual. If the Product does not operate according to the procedure in your device's manual, which supports FlashAir™, or if your device does not support FlashAir™, use the Product according to the procedure in this manual and your device's manual.
- This manual describes how to browse and download data stored in the Product using a Wi-Fi® device.
- There are two ways to format the Product. You can initialize the Product using the FlashAir™ configuration software (Ver.2.00 or later), or format the Product on the device that is compatible with SDHC memory cards, such as a digital camera you are using. Formatting the Product causes all the data stored in the Product to be lost. Back up your data on some other storage media before formatting the Product. If you format the Product using a device that is compatible with SDHC memory cards, you must do the procedure described in FAQ Q1. If you do not use this procedure, the data stored in the Product may be destroyed.

Precautions for Wireless LAN

Wireless LAN communication sends and receives data between devices, such as personal computers, and access points by means of radio transmissions rather than wires. The radio transmissions enable a wireless LAN connection even if there are obstructions.

Users should take appropriate security measures to prevent third parties from hacking or stealing data transmitted wirelessly. Do the initial settings in this manual carefully before using the Product.

Note that there is a possibility that communications over a wireless LAN may be hacked by using some heretofore unheard of way.

Important Message: Initial Settings

Before using the product, be sure to change the password (security key) in one of the following ways. If you fail to do so, your data (e.g. photos) may be stolen or hacked by a third party.

Setting Up the Product Using a Device Which Supports Wi-Fi

(1) Insert the Product into a device (e.g. a digital camera) which is compatible with SDHC memory cards.

(2) Turn on the device. The wireless LAN functionality of the Product starts automatically.

(3) Within five (5) minutes after turning on the device, connect to the Product according to the following steps using a device which supports Wi-Fi (e.g. a smartphone). Without any connection from a Wi-Fi device within 5 minutes, the wireless LAN functionality of the Product automatically turns off. If the wireless LAN functionality turns off, turn off the device in which the Product is inserted, and then turn the device on again.
And when the device in which the Product is inserted is turned off, the wireless LAN functionality of the Product also turns off. Extend the automatic power off time of the device to the longest period possible before doing initial settings.

(4) Activate the Wi-Fi feature of the device (e.g. a smartphone). When the device searches for available wireless LAN networks, “flashair_xxxxxxxxxxxx (twelve alphanumeric characters)” should appear.

Fig.1 Examples of Wi-Fi menus in smartphones

(For Android devices)

(For iPhones)

* Screen elements and user guides vary depending on the device being used. For details, refer to the manual of each device.

(5) Select “flashair_xxxxxxxxxxx”. Enter the default password “12345678” for the network, and the device can connect to the Product.

Fig.2 Examples screens in smartphones for inputting network password

(For Android devices) (For iPhones)

Fig.3 Examples of screens in smartphones when connection is successful

(For Android devices) (For iPhones)

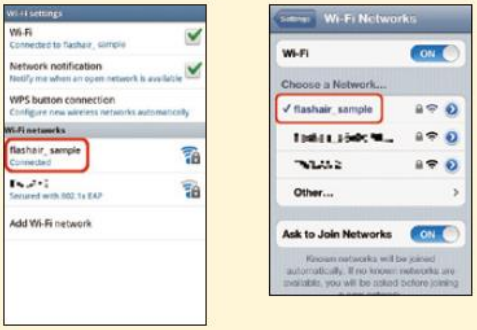

* Screen elements and user guides vary depending on the device being used. For details, refer to the manual of each device

(6) Open the browser of the device. It automatically goes to http://flashair/ If it does not go there automatically, click the refresh button of the browser. The screen may not refresh even if you click the refresh button. If this happens, type the above address into the address bar to go there. When the START screen (Fig. 4) appears, move to step 7.

Fig. 4: START screen

(7) Click the START button and go to the next page.

(8) When the Network settings screen appears, as shown in Fig. 5, enter a new network name in the SSID field and a new password in the Password field. Then, click the “OK” button.
The SSID can be up to thirty two (32) alphanumeric characters.
The password should have eight (8) to sixty three (63) characters. Use a secure password that is not easy to guess. Toshiba recommends you make a note of your SSID and password.

Fig.5: Network settings screen

(9) This completes your initial settings.

Setting Up the Product on A Personal Computer *

* OS: Windows® XP, Windows Vista®, Windows® 7, or Mac OS® X (v10.6.8 or later)

(Fig. 6 and Fig. 7 are screen images from Windows® 7.)

(1) Download the latest FlashAir™ configuration software (Ver.2.00 or later) from the website below.
http://www.toshiba-components.com/FlashAir/tools.html
Double-click the downloaded “FlashAir.exe” to install the Product’s software. After the installation is complete, a “FlashAirTool” icon appears on the desktop of your computer. Double-click the icon to start the FlashAir™ configuration software (Fig. 6).
After the software starts, it moves to the Network settings screen (Fig.7) automatically. If it doesn’t move there, click “Network Settings” on the main menu.

(2) When the screen (Fig. 7) is displayed, enter the new network name in the SSID field and a new password in the Password field. Click “Apply” to apply the settings.

(3) This completes your initial settings.

Fig. 6: FlashAir™ configuration software main menu

Fig. 7: FlashAir™ configuration software network settings screen

Browse Data

How to browse the data stored in the Product using the Wireless LAN functionality (wireless data transfer function)

This function allows you to browse and download data from the device (e.g. a digital camera) to smartphones, tablet computers or computers while the Product is still inside the device.

How to browse data

(1) Insert the Product into a device (e.g. a digital camera) which is compatible with SDHC memory cards.
(2) Turn on the device. The wireless LAN functionality of the Product starts automatically.
(3) Activate the Wi-Fi feature of a device (e.g. a smartphone). The name of the wireless LAN network which you set in the initial settings is displayed. Choose that network and enter the new password if required.
(4) After the connection between the Product and the device (e.g. the smartphone), open the browser of the device. The browser of the device automatically goes to:
http://flashair/
If it does not go there automatically, click the refresh button of the browser. The screen may not refresh even if you click the refresh button. If this happens, type the above address into the address bar to go there.
(5) Files and folders stored in the Product are displayed in the browser (Fig. 8 and Fig.9).

If you select a folder, the contents of the folder will be displayed. Photos taken with the digital cameras are typically stored in folders in the DCIM folder.

If you select a thumbnail of a photo, the photo will be displayed in full-screen (Fig. 10).

Refer to the following sections for detailed information about the buttons in the figures.

Fig. 8: File list screen (Icon mode)

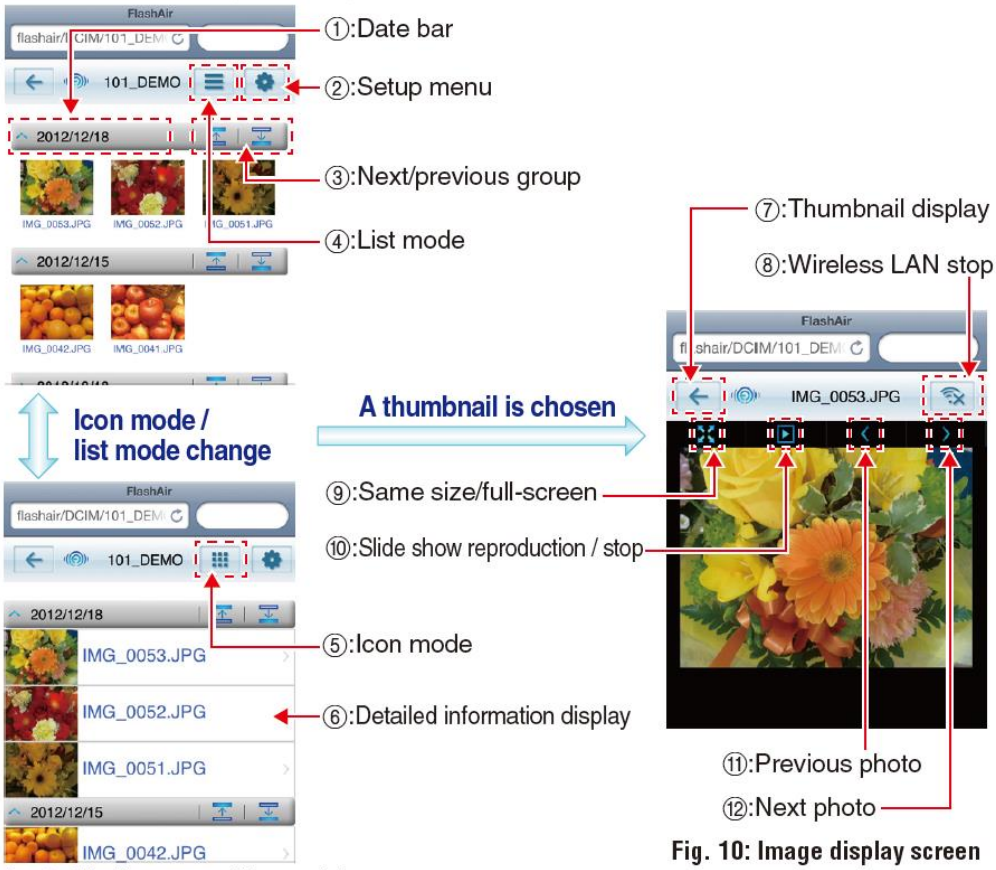

Fig. 9: File list screen (List mode)

Fig. 10: Image display screen

How To Save Files*

* Operating procedures may vary as device operating systems are updated. Refer to the instructions for your device.

- Android devices: Tap and hold the file. Tap “Save image” on a pop-up option list to start downloading a file.

Fig. 11 Example of the “Save Image” menu in an Android smartphone

- iPhone®/iPad®: Tap and hold the file. Tap “Save Image” to start downloading a file.

Fig. 12 Example of the “Save Image” menu in an iPhone

- Computer: Place the pointer on the file and right-click to open a pop-up menu. Click “Save Picture As…” or “Save Target As” to start downloading a file.

Functions On The File List Screen

Files and folders stored in the Product are displayed in the file list screen. When the number of files and folders exceeds 20, the file lists is displayed grouped by day. There are two display modes, one is icon mode (Fig. 8) and the other is list mode (Fig. 9), in the file list screen.

- Switch icon mode and list mode
  When (4) or (5) is pushed, you can change the display mode to list mode or icon mode.
- Display/hide folders and files in a group
  When the date bar (1) is pushed, the folders and the files in the group can be hidden. When the date bar (1) is pushed again, the folders and the files in the group are redisplayed.
- Move next/previous group
  When (3) on the date bar is pushed, you can move to the next/previous group.
- Detailed information display
  When (6) is pushed in the list mode, detailed information about the file or the folder is displayed.

Functions On The Image Display Screen

If you select a thumbnail of a photo, you can display it in full-screen. In the image display screen, there are two display modes, the full-screen and the same-size modes.

- Switch full-screen mode and same-size mode
  When (9) is pushed, you can display images in same-size mode.
  When (9) is pushed in the same-size mode, you can return to the full-screen mode.
- Display next/previous photo
  When (11) or (12) is pushed, you can see the next or the previous photo.
- Slide show
  When (10) is pushed, a slide show will start. The photos will be switched every 15 seconds. When (10) is pushed during a slide show, the slide show stops.
- Stop the wireless LAN functionality
  When (8) is pushed, the wireless LAN functionality of the Product stops. If you want to re-start the wireless LAN functionality, turn off and on the device in which the product is inserted.

Setup Menu

When (2) is pushed in the file list screen, the setup menu is displayed.

* This button is displayed only on the Wi-Fi device (e.g. the smartphone) used for the initial settings.

Fig. 13 Setup menu screen

You can do the following settings from the setup menu:

Network Settings

You can change the SSID and the password. Enter a new network name in the SSID field and a new password in the Password field. Then, push the “OK” button.

The SSID can be up to thirty two (32) alphanumeric characters.

The password should have eight (8) to sixty three (63) characters. Use a secure password that is not easy to guess. Toshiba recommends you make a note of your SSID and password.

When "Advanced settings" is pushed, you can set the following options.

If you want to set each option, check the check box, which you want to set, and push the "OK" button.

The options are as follows.

- Uses the same network settings, even after the card is formatted.
- After setting, even if you format the Product, the SSID and the password settings are maintained.
  Note that one of the following ways is required to reset SSID and password to their initial state.
- Check in the check box of next option (“Reset the network settings to their initial state.”) and do network settings once again.
- Initialize the card using FlashAir™ configuration software (Ver.2.00 or later). The initialize the card feature causes all the data stored in the Product to be lost. Back up your data on some other storage media before formatting the Product.

- Reset the network settings to their initial state.
- The SSID and the password settings are returned to the default settings.

Wireless LAN Startup Mode

You can set the wireless LAN startup mode. Choose startup mode and push the "OK" button. There are two startup modes. One is the automatic startup mode and the other is the manual startup mode.

Automatic startup mode

- In this mode, the wireless LAN functionality of the Product runs automatically when the device holding the Product is turned on. If there is no attempt to connect to the Product from a device (e.g. a smartphone) within the time set in the timeout settings, the wireless LAN functionality automatically turns off.
- To restart the wireless LAN functionality, turn off the device holding the Product and then turn it on again.
- Automatic startup mode is the default settings.

Manual startup mode

- In this mode, you can turn the wireless LAN functionality on and off by changing the write protection status of the photo which is set as the wireless LAN startup image. Set your favorite photo as the wireless LAN startup image. When this photo is set to unprotected using the device's settings, the wireless LAN functionality is turned on. When it is set to protected, the wireless LAN functionality is turned off. Note that the status of the wireless LAN functionality changes only when you change the write protection status of the wireless LAN startup image. So, when you turn on the camera with this photo unprotected, it is necessary to set it to protected and then set it to unprotected again to turn on the wireless LAN functionality.

  *The name and the operation of the write protection menu depend on the device being used. For details, refer to the manual of each device.
- The current settings of the wireless LAN startup image can be checked from the settings screen.
- As a default, the following image is stored on the Product as the wireless LAN startup image.
- /DCIM/100__TSB/FA000001.JPG
- If you delete the image which is set as the wireless LAN startup image, you cannot turn on the wireless LAN functionality.
- When you do not use the wireless LAN functionality, set the wireless LAN startup mode to manual startup mode.

Fig. 14 FA000001.JPG

Photoshare

You can share only photos from a specific date and folder. How to use Photoshare is described as follows.

Starting Photoshare

(1) Enter the Photoshare settings screen from the setup menu. The thumbnails are displayed by group according to date and folder.
(2) Select the group of photos you want to share.
(3) Push the "OK" button. The confirmation message of the date and the folder to be shared is displayed.
(4) If the "OK" button is pushed, the SSID and the password change to the temporary SSID (photoshare_xxxxxxxxxxx) and the temporary password (00000000) for Photoshare. Change the wireless network settings of the Wi-Fi devices (e.g. smartphones).

Browsing the photos shared by Photoshare

After connecting with the SSID and the password for Photoshare, when the browser is open, the Photoshare screen opens automatically. If it does not open automatically, click the refresh button of the browser. The screen may not refresh even if you click the refresh button. If this happens, type the following address into the address bar to go there.

http://flashair/

The SSID and the password for Photoshare are displayed on the Photoshare screen in the Wi-Fi device which is used to set Photoshare. These can be used to let others, who will be shared your Photos, to know your SSID and password for Photoshare.

Exiting Photoshare

Push the "Stop sharing" button.

If the wireless LAN startup mode is in the manual startup mode, the wireless LAN functionality is also turned off when Photoshare ends. In order to re-start the wireless LAN functionality, set the wireless LAN startup image to protected and then set it to unprotected again.

Operating Precautions

- If wireless LAN functionality is turned off while using the Product, the device within which the Product is used might power off automatically. Extend the automatic power off time of the device to the longest period possible.
- The range of the wireless signal may be affected if the Product is placed near metal surfaces or other solid high-density materials.
- When a number of devices connect to the Product, the wireless LAN connection might slow down or be interrupted.
- The version of the firmware of the Product can be confirmed by the version number "F19BAW3AW*.**.**", which is displayed on the lower right of the setup menu screen (Fig. 13).
- The Product is compliant with local radio regulations in the following countries or regions (as of March 2013).

EU (European Union), Russia, South Africa, Japan, United States of America, Canada, mainland China, Hong Kong, Taiwan, Korea, Australia, New Zealand

Use in other countries and regions may violate local ordinances.

You can check the latest information in the online manual http://www.toshiba-components.com/FlashAir/faq.html or contact Customer Service.

Default settings

SSID	flashair_xxxxxxxxxxxx (x represents the MAC address of the Product)
Security	WPA2 password (security key): 12345678
Encryption and authentication	WPA2-AES (access point mode)
IP address	192.168.0.1 (access point mode)

Wireless LAN Functional Specifications

Wireless LAN Standard: IEEE802.11b/g/n

Modulation: DSSS/CCK (1, 2, 5.5, 11 Mbps), OFDM (6 to 72.2 Mbps)

Wireless LAN Security: WEP, TKIP, AES (WPA/WPA2)

Note: The above specifications are as of March, 2013.

FAQ

Q1. The Product does not work well after I formatted it in my SDHC memory card compatible camera.

A1. If you format the Product using an SDHC memory card compatible device, do the following to reset the wireless LAN functionality of the Product.

(1) Turn off the device which is holding the Product, eject the Product, re-insert the Product, and turn on the device again. The wireless LAN functionality of the Product starts automatically.
(2) The SSID and the password are the same if you set the option “Uses the same network settings, even after the card is formatted”. Or, the default SSID and the default password are used if you did not set the above setting. In either case, connect to the network using the proper password.
(1) When you open the browser of the Wi-Fi device, the START screen (Fig. 4) is displayed. Push the “START” button.
If it did not jump to http://flashair/ automatically, click the refresh button of the browser. The screen may not refresh even if you click the refresh button. If this happens, type the above address into the address bar to go there.
(3) If you did not set “Uses the same network settings, even after the card is formatted.” in the network settings, the network settings screen is displayed. Do the initial settings again. If the network settings screen is not displayed, go to step.5.
(4) Turn off the device which is holding the Product, eject the Product, re-insert the Product, and turn on the device again.
(5) This completes the procedure to reset the wireless LAN functionality. Now, you can use the wireless data transfer function described in this manual.

Q2. I have forgotten the password (security key) or others have changed the password.

A2-1. Back up the data stored on the Product using a device which is compatible with SDHC memory cards (e.g. a computer). Initialize the card using FlashAir™ configuration software (Ver.2.00 or later). After initialization, the SSID and the password settings return to the default settings. Do the initial settings again. Formatting the Product causes all the data stored in the Product to be lost. Back up your data on some other storage media before formatting the Product.

A2-2. If you have not set the network settings with the option “Uses the same network settings, even after the card is formatted.”, you can also reset the SSID and the password to the default settings by the following procedure.

Back up the data stored on the Product using a device which is compatible with SDHC memory cards (e.g. a computer). Format the Product using a device which is compatible with SDHC memory cards (e.g. a digital camera). After formatting, the SSID and the password settings are returned to the default settings. Do the initial settings again. Formatting the Product causes all the data stored in the Product to be lost. Back up your data on some other storage media before formatting the Product.

Q3. Neither the default SSID "flashair_xxxxxxxxxxx" nor the SSID I set appear as wireless LAN networks.

A3-1. Confirm that the device that is holding the Product is turned on.

A3-2. Remove any obstacles between the device that is holding the Product and the Wi-Fi devices (e.g. smartphones), and try again.

A3-3. Confirm the settings of the timeout of the automatic startup mode.

A3-4. You may need to change the settings of a device that is holding the Product. Refer to the list of compatible devices on our website.

Q4. What about information not included in this manual?

A4. Check the following on-line manual for details about the settings, Q&A and other information.

http://www.toshiba-components.com/FlashAir/faq.html

Footnotes

The SDHC logo is the trademark of SD-3C LLC.

Wi-Fi® is the trademark of the Wi-Fi Alliance®.

Windows® and Windows Vista® are registered trademarks of Microsoft Corporation in the United States and other countries.

Mac OS® X, iPhone®, and iPad® are trademarks or registered trademarks of Apple Inc. in the United States and other countries.

FlashAir™ is a trademark of Toshiba Corporation.

All other company/product names may be registered trademarks of their respective companies.

Made in Japan.

© Copyright 2013 Toshiba Corporation. All rights reserved.

Safety Instructions for SD Cards

Keep out of reach of children and pets.

Do not disassemble or modify the Product.

Turn off the device in case the Product overheats.

www.toshiba-memory.com

Safety information and Rules and Regulations for wireless LAN

Wireless LAN devices may cause interference with medical equipment such as cardiac pacemakers. If you use personal medical equipment, consult with your physician and medical equipment instructions before using the Product. The Product should not be used in environments with medical equipment such as hospitals and medical offices, or near users of personal medical equipment.

Always turn off wireless functionality if the Product is near automatic control equipment or appliances such as automatic doors or fire detectors. Radio waves can cause malfunction of such equipment, possibly resulting in serious injury.

Do not use the Wireless LAN functionality near a microwave oven or in areas subject to radio interference or magnetic fields. Interference from a microwave oven or other source can disrupt Wireless LAN operation.

The transmission speed over the wireless LAN, and the distance over which the wireless LAN can reach, may vary depending on surrounding electromagnetic environment, obstacles, access point design and configuration, client design and software/hardware configurations. The transmission rate described is the theoretical maximum speed as specified under the appropriate standard – the actual transmission speed will be lower than the theoretical maximum speed.

Warranty statement

The Product is warranted against defects in materials and workmanship for five (5) years from the date of purchase. Toshiba's sole liability in the event of such defects is to repair or replace the Product, at Toshiba's option, and Toshiba may replace the Product with a remanufactured Product. Toshiba does not warrant that the use or operation of this Product will be error free, nor does it warrant that any data stored on the Product will remain accessible or uncorrupted. To protect against accidental data loss, back up your data frequently on multiple types of storage media.

Regulatory Statements

European Union Regulatory Notice

This device bearing the CE marking is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This device complies with the following harmonized European standards.

Health: EN62311:2008

Safety: EN60950-1:2006, +A1:2010, +A11:2009, +A12:2011

EMC : EN301 489-1 V1.9.2:2011, EN301 489-17 V2.1.1:2009

Radio: EN300 328 V1.7.1:2006

The following CE marking is valid for EU non-harmonized telecommunications products.

CE0560

Refer to the regulatory label provided on this product.

The telecommunications functionality of this product may be used in the following EU and EFTA countries:

Austria, Belgium, Bulgaria, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Liechtenstein, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovak Republic, Slovenia, Spain, Sweden, Switzerland, and United Kingdom.

EU Declaration of Conformity: This Product carries the CE-Mark in accordance with the related European Directives. Toshiba Electronics Europe GmbH, Hansaallee 181, D-40549 Dusseldorf, Germany is responsible for CE-Marking.

For further information, please visit www.toshiba-memory.com

Hotline: 0 180-5677765 from Germany 0,14 Euro/min.

+49 180-5677765 from other Countries than Germany

South Africa

TA-2012/1362
ICASA
APPROVED